

COMBOMAX[®]

Combined boiler and water heater


COMBOMAX INSTALLATION DRAWINGS





500 9th AVENUE
RICHMOND, QC, CA, J0B 2H0
T : 1 819 826-5613
F : 819 826-6370

COMBOMAX 120-9 DOMESTIC HOT WATER

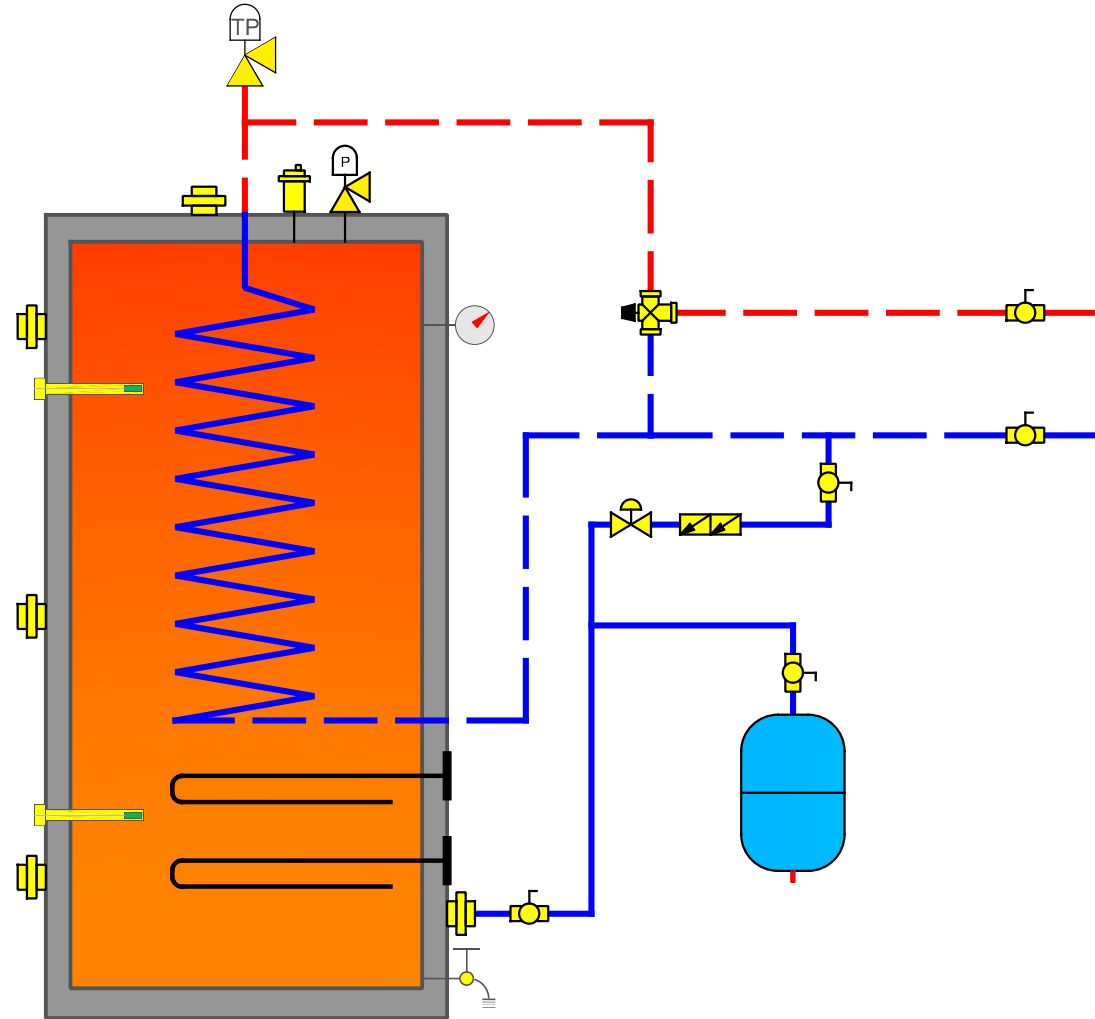

COMBOMAX 120-9

SYMBOLES


	BALL VALVE		THERMOMETER		BACK FLOW PREVENTER		THERMOSTATIC MIXING VALVE		AUTOMATIC AIR VENT		COLD WATER SUPPLY
	CHECK VALVE		PRESSURE RELIEF VALVE		DRAIN COCK		BALANCING VALVE		PUMP		PRE-HEAT DOMESTIC WATER/ECD RECIRCLE
	PRESSURE REDUCING VALVE		TEMPERATURE AND PRESSURE RELIEF VALVE		SENSOR WELL		AIR SEPARATOR		EXPANSION TANK		DOMESTIC HOT WATER
	LOW WATER CUTOFF										HEATING HOT WATER/FLUID
											HEATING WATER/FLUID RETURN
											CONTROL CIRCUIT

THE INSTALLATION MUST CONFORM TO LOCAL, STATE, PROVINCIAL, NATIONAL CODES. IN ANY CASE WHERE INSTRUCTIONS CONFLICT WITH THE ABOVE, LET THOSE CODES TAKE PRECEDENCE. FOR MORE INFORMATION, LOOK THE INSTALLATION MANUAL .



500 9th AVENUE
RICHMOND, QC, CA, J0B 2H0
T : 1 819 826-5613
F : 819 826-6370

COMBOMAX 120-9 DOMESTIC HOT WATER AND HEATING

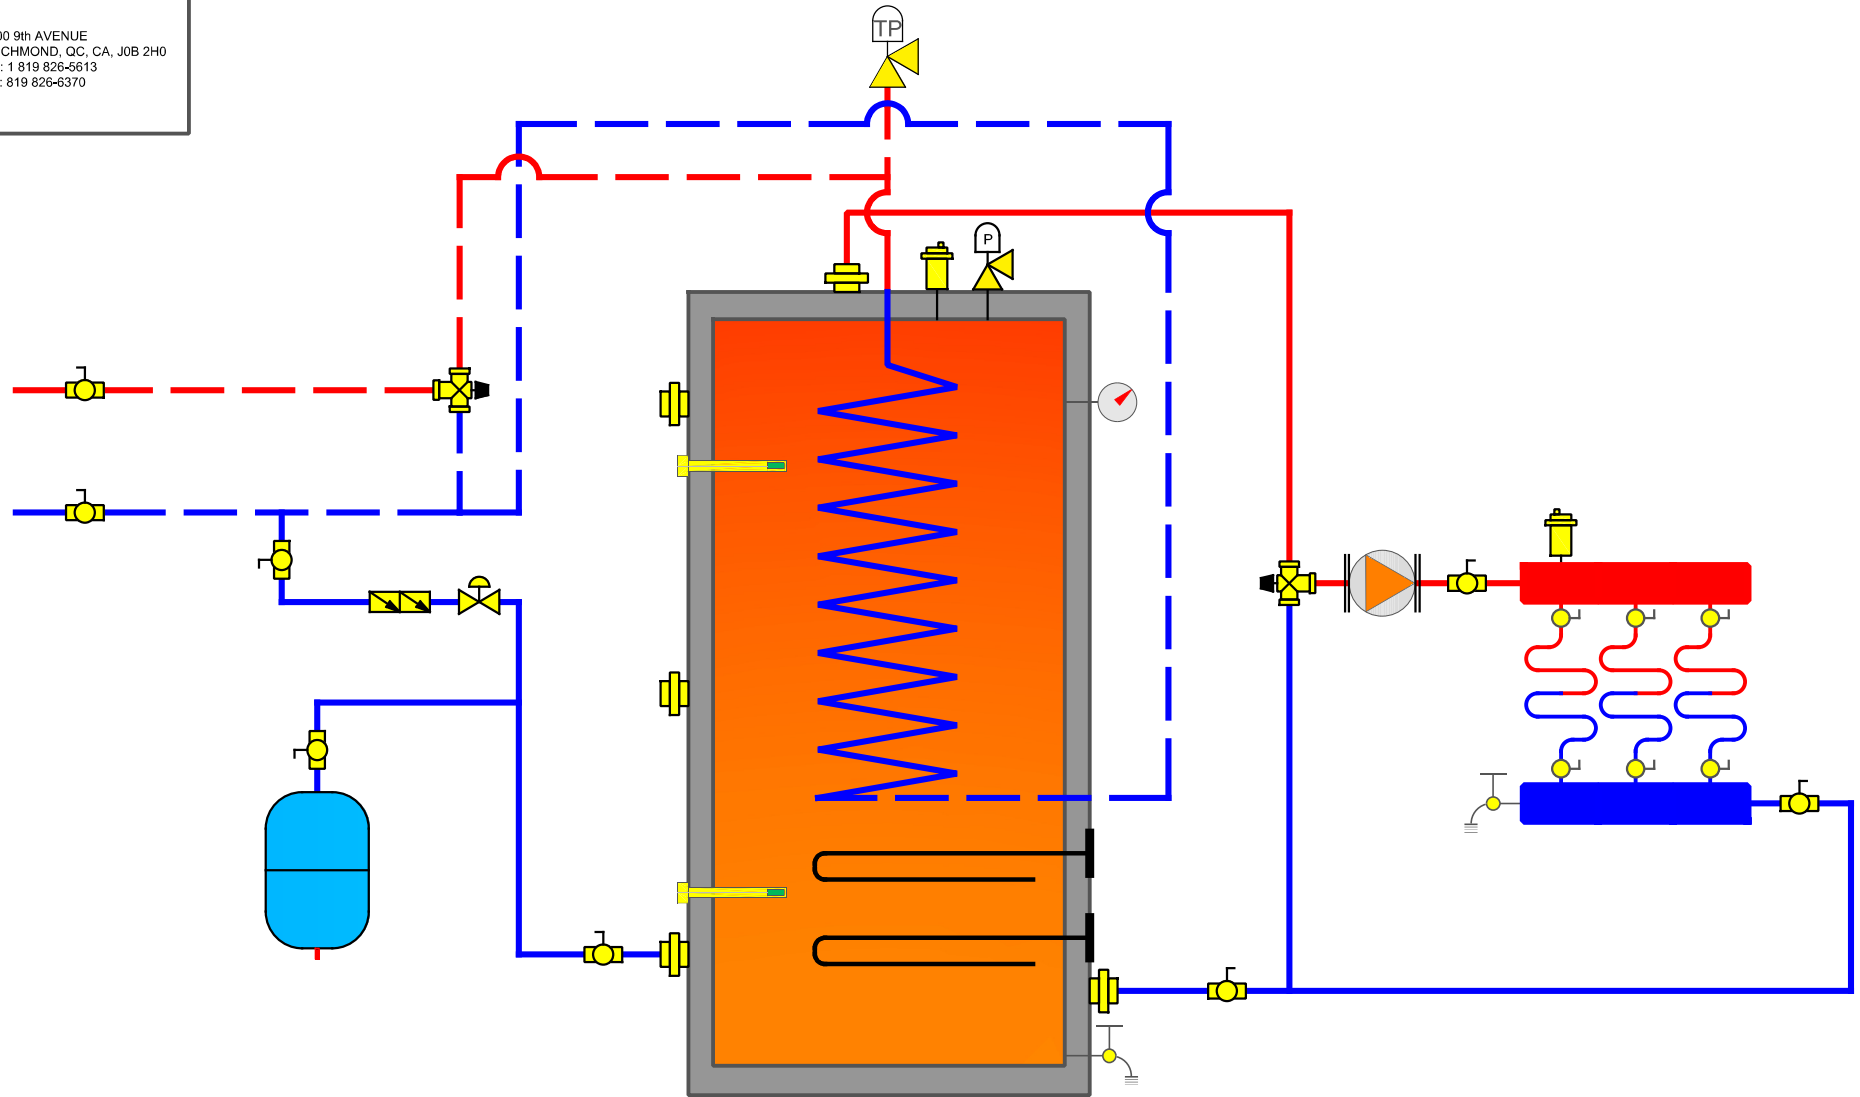

SYMOLES

COMBOMAX 120-9



BALL VALVE



THERMOMETER



BACK FLOW PREVENTER



THERMOSTATIC MIXING VALVE



AUTOMATIC AIR VENT

— COLD WATER SUPPLY

— PRE-HEAT DOMESTIC WATER/ECD RECIRCLE

— DOMESTIC HOT WATER

— HEATING HOT WATER/FLUID

— HEATING WATER/FLUID RETURN

— CONTROL CIRCUIT



CHECK VALVE



PRESSURE RELIEF VALVE



DRAIN COCK



BALANCING VALVE



PUMP



PRESSURE REDUCING VALVE



TEMPERATURE AND PRESSURE RELIEF VALVE



SENSOR WELL



AIR SEPARATOR



EXPANSION TANK




LOW WATER CUTOFF

THE INSTALLATION MUST CONFORM TO LOCAL, STATE, PROVINCIAL, NATIONAL CODES. IN ANY CASE WHERE INSTRUCTIONS CONFLICT WITH THE ABOVE, LET THOSE CODES TAKE PRECEDENCE. FOR MORE INFORMATION, LOOK THE INSTALLATION MANUAL .



500 9th AVENUE
RICHMOND, QC, CA, J0B 2H0
T : 1 819 826-5613
F : 819 826-6370

1 COMBOMAX 120-9 - 1 BOILER - 2 BASEBOARD

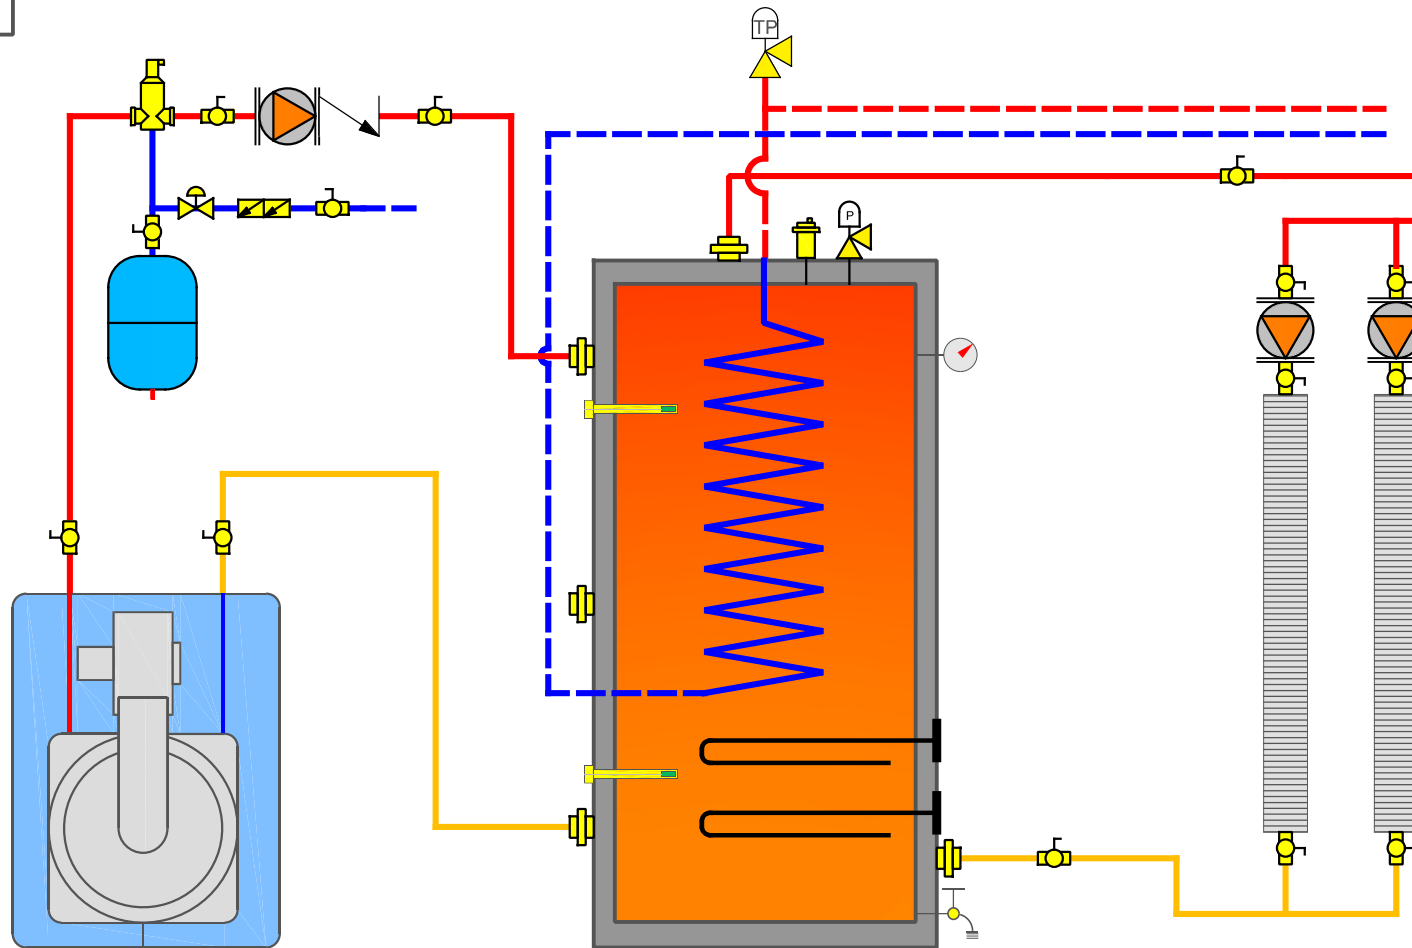

BOILER

COMBOMAX 120-9

SYMOLES

	BALL VALVE		THERMOMETER		BACK FLOW PREVENTER		THERMOSTATIC MIXING VALVE		AUTOMATIC AIR VENT		COLD WATER SUPPLY
	CHECK VALVE		PRESSURE RELIEF VALVE		DRAIN COCK		BALANCING VALVE		PUMP		PRE-HEAT DOMESTIC WATER/ECO RECIRCLE
	PRESSURE REDUCING VALVE		TEMPERATURE AND PRESSURE RELIEF VALVE		SENSOR WELL		AIR SEPARATOR		EXPANSION TANK		DOMESTIC HOT WATER
	LOW WATER CUTOFF										HEATING HOT WATER/FLUID
											HEATING WATER/FLUID RETURN
											CONTROL CIRCUIT

THE INSTALLATION MUST CONFORM TO LOCAL, STATE, PROVINCIAL, NATIONAL CODES. IN ANY CASE WHERE INSTRUCTIONS CONFLICT WITH THE ABOVE, LET THOSE CODES TAKE PRECEDENCE. FOR MORE INFORMATION, LOOK THE INSTALLATION MANUAL .